




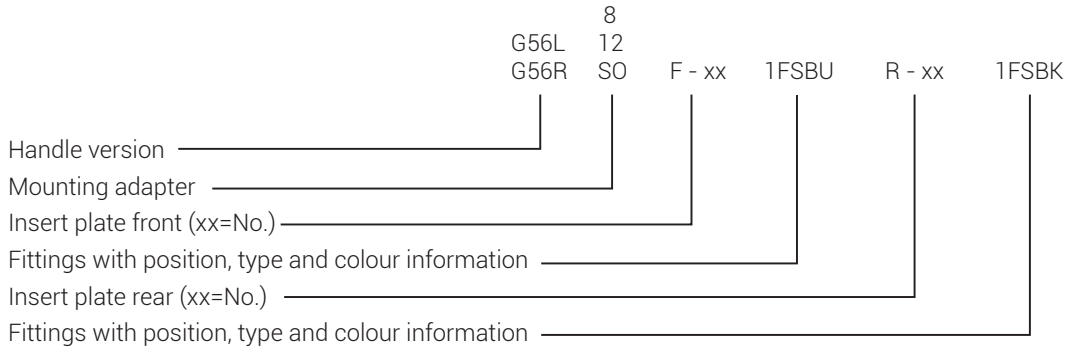

## Type code

**Note:**

Dimensions see TI-G56

For reasons of space, not all installation positions can be used simultaneously

Degree of protection depending on the inserts

Adapter:                8 = for joystick VNS0

                          12 = for joystick HS2, NS3, VNS2, NNS0

                          SO = Special adapter

Notes on handle wiring and maximum number of cores, see sheet G-V.